

Set Up Your LED Tape in Five Easy Steps


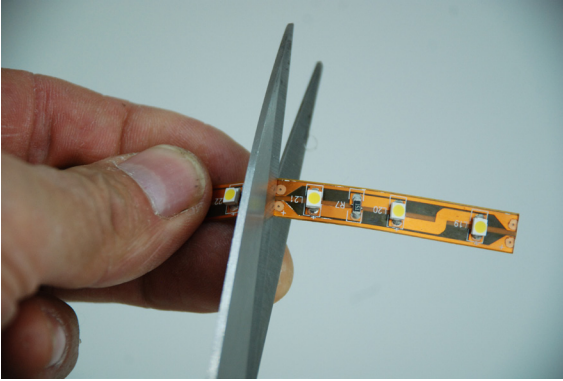


Step One

Cut tape at marked increments using standard paper scissors

Step Two


Gently pull black sliders out from clip.
Be careful not to pull them out

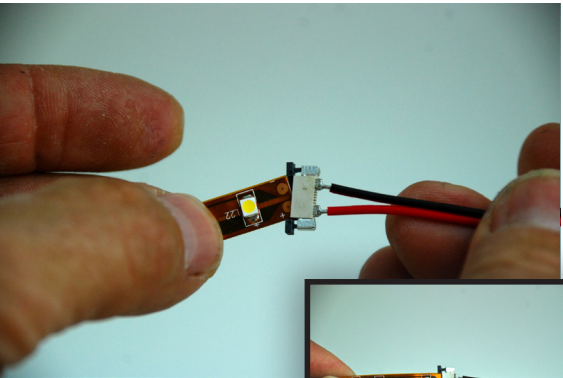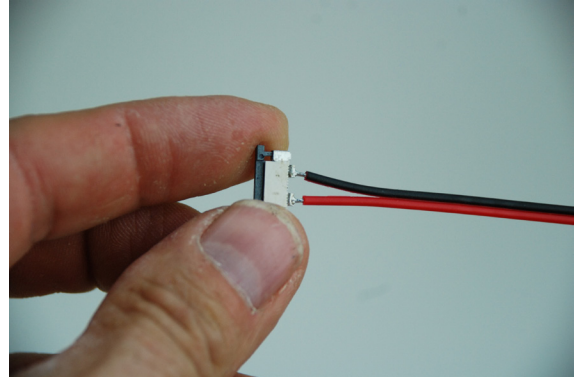

Step Three



Slot cut tape into wire clip as shown
- be sure tape fits square and snug.

(should look like this)

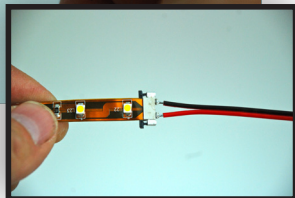

Step Four

Using equal pressure, push black sliders on wire clip back in, to hold tape in place.

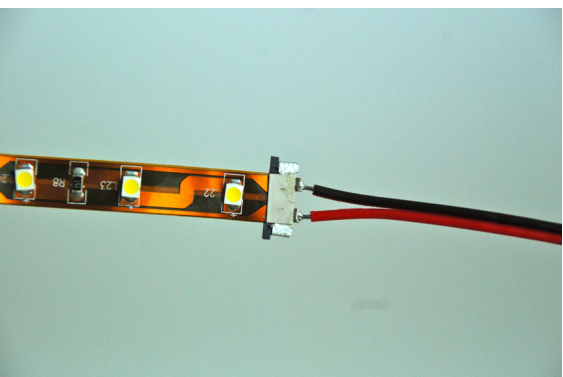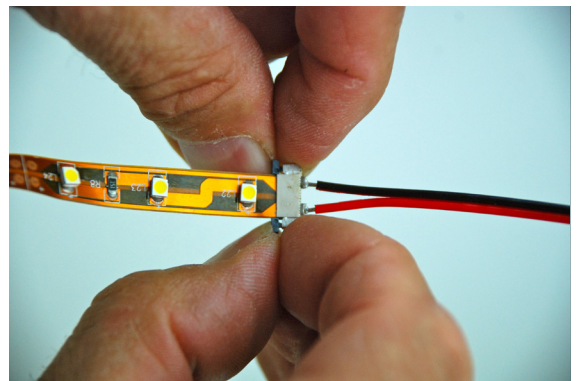

Step Five

Repeat if joining one section of tape to another.

(final product should look like this)